



## **Hurricane Air Induction System Installation Instructions**


- 1.) Unplug and disconnect MAF sensor (Photo 1A)
- 2.) Unplug and disconnect MAT sensor '97-'00 only (Photo 1A)
- 3.) Using a flathead screwdriver, unscrew the hose clamps on the MAF sensor and the throttle body, then remove the stock air duct. (Photo 1A)
- 4.) Remove radiator top support by unscrewing (4) 10mm screws, (2) on each side. Then pull top support straight up to remove. (Photo 1A)

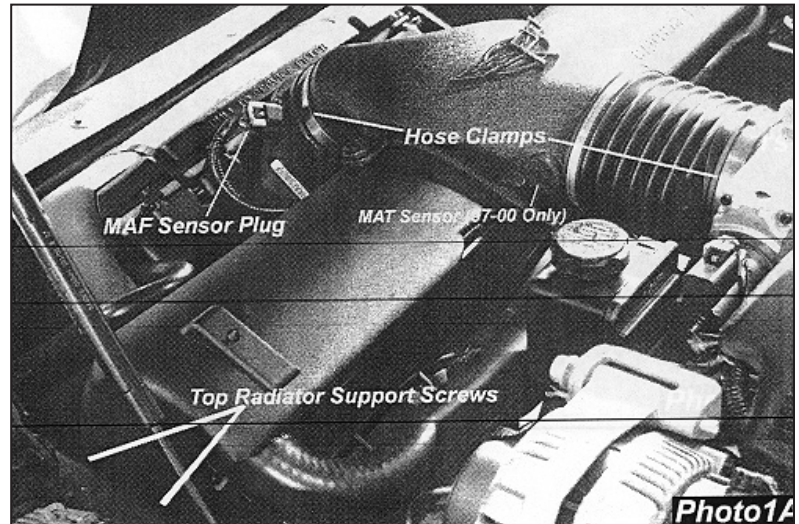

- 5.) Go under front of car. Remove 7 - 7mm screws from the bottom of the radiator shroud under the front bumper cover. (Photo 2A).
- 6.) Spread bumper cover apart from radiator shroud on the passenger side. You should be able to slide your hand up inside and with a flathead screwdriver, pry out the push-in fastener to disconnect the air sensor (Photo 2A).
- 7.) Go back up to top of engine compartment. Lift stock radiator shroud up a few inches and using a long, flathead screwdriver, pry shroud off of push pins. These are about 10" from the top of the radiator. (Photo 3A)

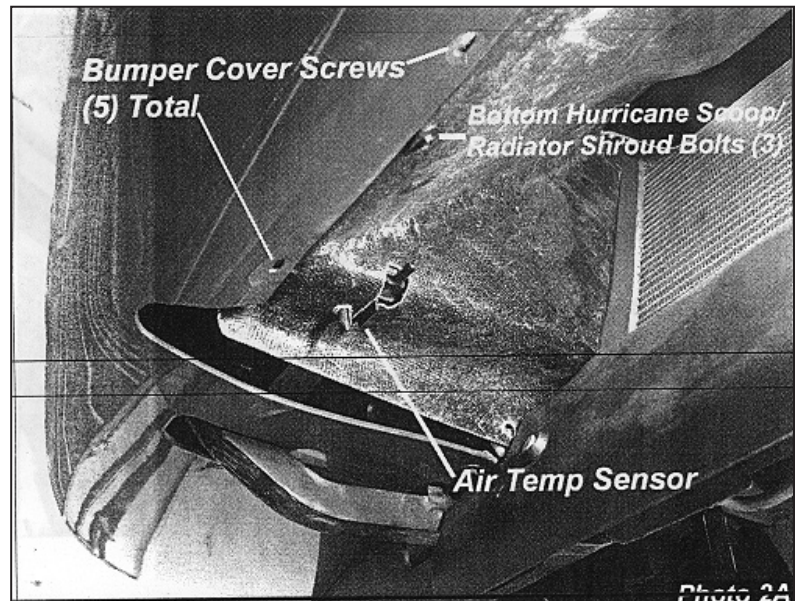

- 8.) Pull stock radiator shroud up and out through top.
- 9.) To install the bottom Hurricane scoop/radiator shroud, carefully lower it down into the stock radiator shroud location.
- 10.) Install new Hurricane filter element into the top of the Hurricane filter cover, to hold the filter in place, you can install the MAF sensor and tighten with a flathead screwdriver. (Photo 4A)

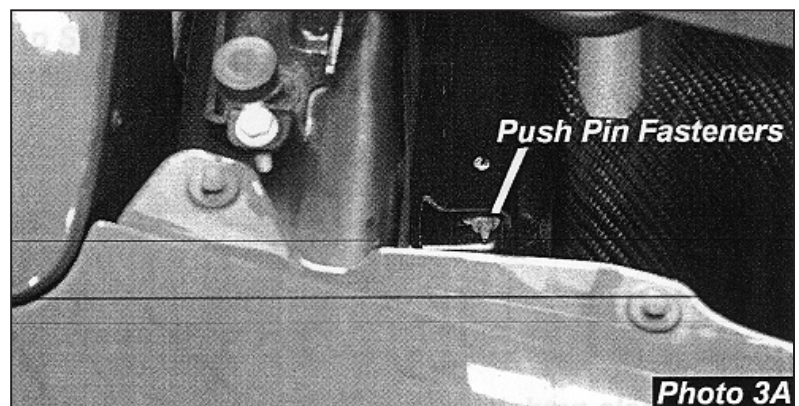


## **Hurricane Air Induction System Installation Instructions**

11.) Carefully lower the top of the Hurricane filter cover with the filter and MAF installed onto the top of the bottom scoop/shroud. (Photo 4A).

12.) Align holes for the push pins, then push both the top and bottom pieces of the Hurricane down and secure onto the push pins. (Photo 3A)

13.) Step 12 will help align (2) side screw holes. Locate them and install 1 - 7mm screw on each side of the Hurricane. (Photo 4A)

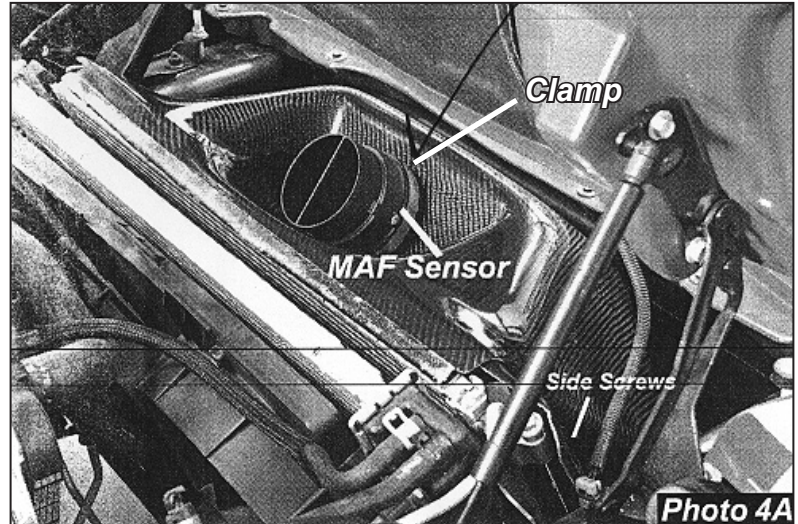

14.) Go back up to the top of the car. Locate (3) screw holes towards the bottom of the Hurricane scoop/radiator shroud and align with Hurricane top filter cover. Use the (3) 7mm screws to secure top and bottom pieces (Photo 2A).

15.) Locate and re-install Air Temp Sensor into the bottom of the Hurricane scoop/radiator shroud in the stock location (Photo 2A).

16.) Locate and align the (5) nut clips on the Hurricane under the front bumper cover. Use the (5) stock 7mm screws to secure the bumper cover to the bottom of the Hurricane scoop/shroud. (Photo 2A)

17.) Go back up to the top of the engine compartment. Re-install the radiator top support with the (4) stock 10mm screws. (Photo 1A)

18.) Re-install air duct, attach to throttle body and MAF sensor, and tighten clamps. (Photo 1A)

19.) Re-install MAT sensor ('97-'00 Only) (Photo 1A).

10.) Re-check all connections, screws and bolts. Project Complete!