

LINGENFELTER

P E R F O R M A N C E E N G I N E E R I N G

Lingenfelter Signature Series 2010-2012 Camaro Rocker Covers



PN: L850171410

Lingenfelter Performance Engineering
1557 Winchester Road
Decatur, IN 46733
(260) 724-2552
(260) 724-0422 fax
www.lingenfelter.com
Release date 9-23-2010

Parts List

L850171410 Rocker Covers

#	Description	Part number
1	LPE L28 Camaro side rocker (set)	38-4-013
26	Size 10 grille nuts	AV13933
26	Rocker bolts M8 x .75	AV13026
2	Lingenfelter paint mask	XX03933-0007
1	Chip resistant film	MMM84706

Tools & Materials Required

- Drill
- 0.25" drill bit
- Ratchet
- Ratchet extension
- 7mm socket
- 10mm socket
- 13mm deep well socket
- Small flat head screwdriver
- Pry tool
- Cut-off tool
- Torx 20 socket
- Phillips head screwdriver
- Torque Wrench

Optional Items

#	Part number	Description
1	11610495	Rocker Panel Retaining clips/rivets
1	92238467	Weather stripping
1	L850161410	Rear Valance
1	L850171410	Rocker Covers
1	L850151410	Rear Deck Spoiler
1	L850131410	High Rise Ram Air Hood
1	L850181410	Grille with fiberglass insert
1	L850191410	Grille with CF insert
1	L850201410	Ram Air Hood with Window

Read the entire instruction manual before beginning installation. Some stock parts will be used in reassembly.

When referencing the side of the vehicle, the driver side of the vehicle is considered the left side and the passenger side of the vehicle is considered the right side of the vehicle.

Some installation pictures shown are with the body components unpainted. LPE recommends taking your vehicle to a professional painter to have your body components painted.

1. Locate the wheel liner securing screw on the passenger rear side of the vehicle.



2. Using a Torx 20 socket and ratchet, remove the bolts indicated.



3. Locate the wheel liner securing bolts on the passenger front side of the vehicle and, using a Torx 20 socket and ratchet, remove the bolts.



4. Using a pry tool (or equivalent) start at the front of the vehicle and pry the stock side rockers off of the vehicle.

NOTE: The retaining clips are easily broken so take care when prying the side rocker from the vehicle. Be sure to not scratch the paint on the vehicle.





5. Continue prying the rockers off of the vehicle while gently pulling the rockers away from the vehicle. Be careful not to damage the retaining clips, they will be used in the installation of the LPE rockers. If you need replacement retaining clips, you can find the part number in the "Optional Items" parts list (11610495).



6. Remove the rockers from vehicle. Be careful when removing the rockers, they can easily be damaged if forced during the removal process.



7. Remove the retaining clips from the rockers by sliding them toward the front of the rocker, be sure not to break any of the clips as they will be re-used on the LPE rocker. If any are damaged the replacement part number is 11610495.



8. With the retaining clips removed, set the OEM rockers safely aside so they do not get damaged.



9. Install the retaining clips removed in step 7 into the LPE rocker by inserting them and sliding them into place as shown. Be sure not to damage the retaining clips.



10. Be sure that each retaining clip is securely in place on the rocker.



11. Insert the supplied white size 10 grille nuts (PN: AV13933) into the rocker panel on the vehicle. Be sure the grille nuts are securely inserted into each spot.



12. There are thirteen (13) size 10 grille nuts (PN: AV13933) for each side of the vehicle.




13. Place the rocker into position on the vehicle. The retaining clips will clip into place. You may need to adjust the retaining clips slightly from side to side to ensure the rocker is lined up correctly.



14. Install the thirteen (13) supplied rocker bolts (PN: AV13026) into each hole on the rocker, these will be installed into the grille nuts. Be sure these bolts are tight and secure but do not overtighten.



15. Using a pry tool (or equivalent), carefully remove the weather stripping from the OEM rocker by prying out the tree style rivets that hold the weather stripping in place. This weather stripping will be used on the LPE rocker. Inspect the weather stripping for damage or wear. If you need to replace your weather stripping, the GM part number is 92238467.

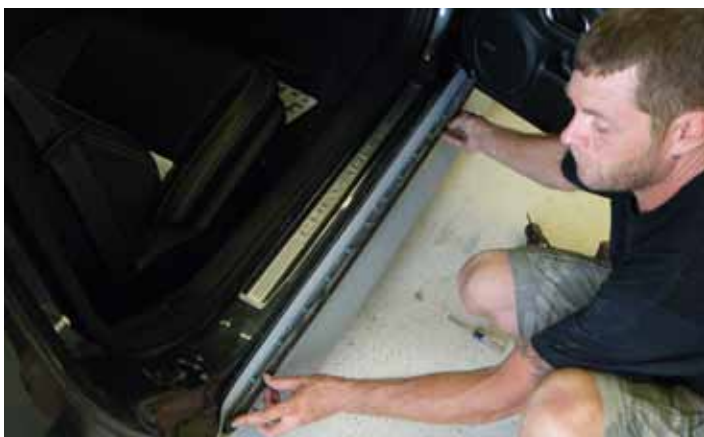

16. Install the weather stripping onto the LPE rocker by pushing each tree rivet into the holes as shown.



17. Install your wheel liner securing bolts with the Torx 20 socket (or equivalent) after aligning the end plates. Be sure the four (4) bolts are securely torqued to 27 in-lb (3 N-m).

18. Apply the chip resistant film to the inside of the front wheel wells behind the front wheels.

NOTE: You will need to trim the chip resistant film.

19. The installation of your Rocker covers is now complete.

For additional product installation information and technical support, contact LPE or your LPE products distributor. You can also find technical support and usage discussions regarding this product and many other LPE products in our Internet forums:

<http://www.lingenfelter.com/LPEforumfiles>



Lingenfelter Performance Engineering
1557 Winchester Road
Decatur, IN 46733
(260) 724-2552
(260) 724-0422 fax
www.lingenfelter.com